


Steering Wheel

POWER ASSISTED SYSTEM (POWER STEERING)

2. Steering Wheel

A: REMOVAL

- 1) Disconnect the negative terminal from the battery, and wait for 60 seconds or more.
- 2) Set the tire to the straight-ahead position.
- 3) Remove the driver's airbag module assembly.
 - (1) Push in the snap pin using a hexagon wrench or equivalent wrapped with a protective tape to disengage the locks (3 locations).

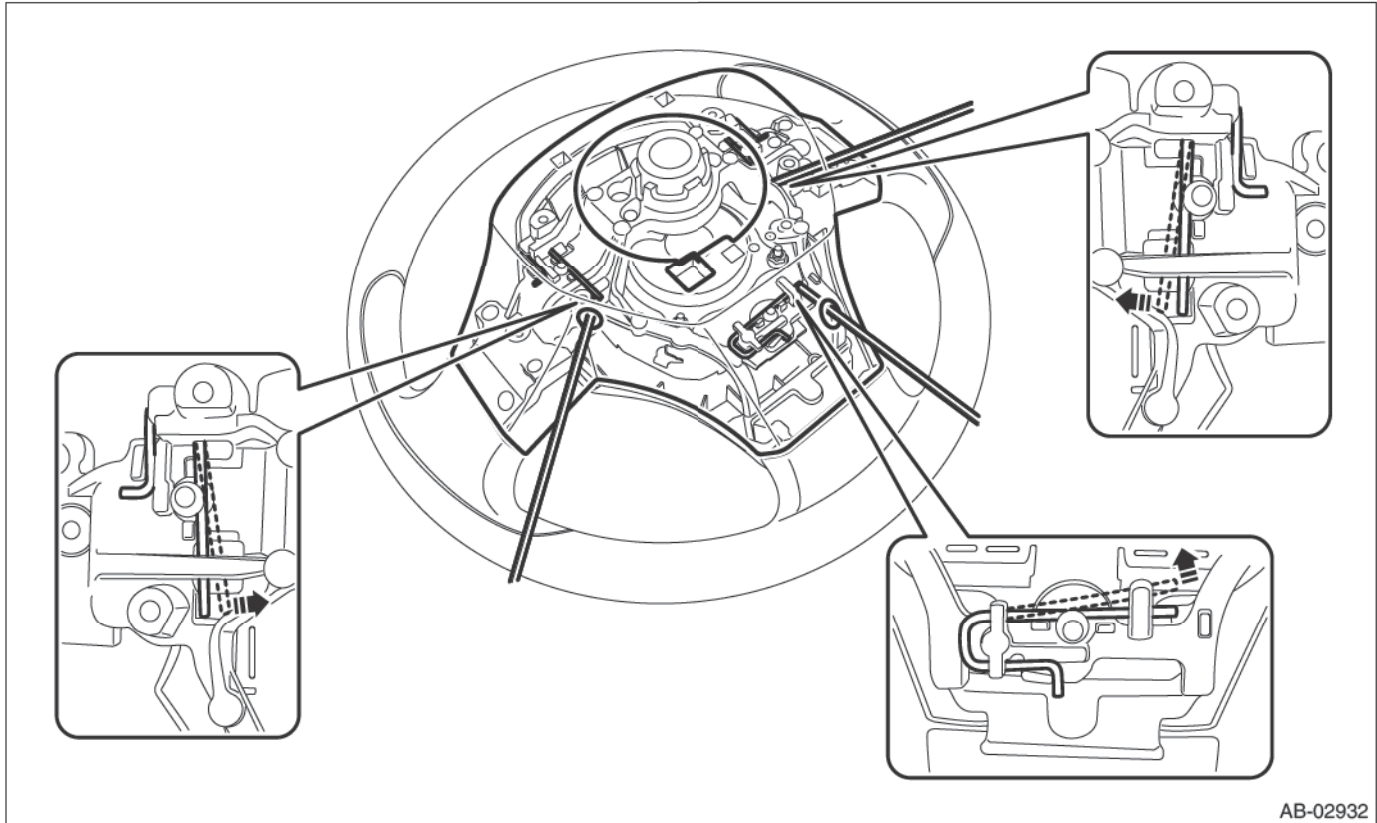

- (2) Disconnect the horn harness and airbag connector and remove the airbag module assembly. <Ref. to AB-21, DRIVER'S AIRBAG MODULE, CURTAIN AIRBAG MODULE & PRETENSIONER, PROCEDURE, Airbag Connector.>

